



DISCONNECT THE BATTERY FIRST!

Once the Molex Connectors have been removed from your handlebar switch harness, simply match the colored wire with the mating terminal found on the extension harness. Be sure to cover the terminals with the 3" long heat shrink allowing 1/2" overlap on each side. Heat the shrink tubing in place on each terminal splice and allow the tubing to cool for a few minutes before reinstalling. When all connections have been made, cover the extension harness with the heat shrink provided.


Connector Removal

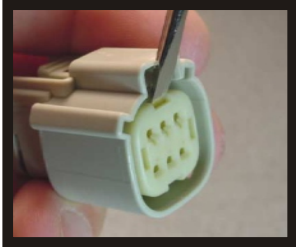

1. Place a small blade style screw driver into designated pry point.

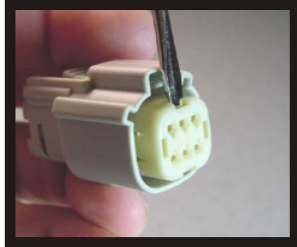


2. Pry outward on the screwdriver in order to release the TPA.

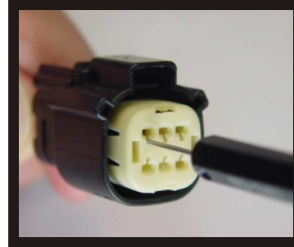


3. Once TPA slides forward, insert removal tool and push terminal while pulling wire to remove from connector housing.


Connector Installation

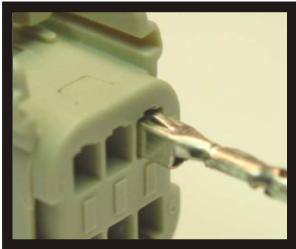

1. When re-installing terminals be sure to check for proper terminal alignment.

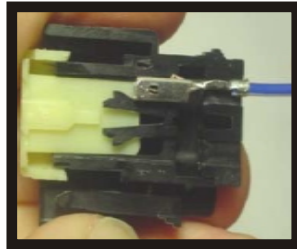

2. Once terminal goes into housing, push in until a click is heard.

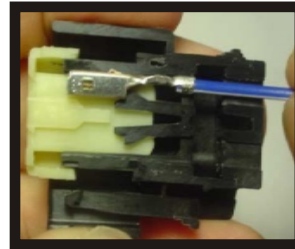

3. Now pull wire back to engage terminal with the connector. Push the TPA in order to lock all terminals in place.

Harley Davidson Handlebar Controls, (Baggers)
2007 - Up

Left Side

ORANGE/BLACK
GRAY/GREEN
GREEN/BLUE
PINK/WHITE
BROWN/BLACK
VIOLET/BLACK
YELLOW/BLACK
WHITE/VIOLET
WHITE
BLUE
YELLOW
ORANGE/WHITE
BLACK
BLACK/RED

Right Side

ORANGE/WHITE
RED/BLUE
GRAY
WHITE/BLACK
WHITE/BROWN
BLACK/RED
BROWN/WHITE
GRAY/WHITE
PINK/WHITE
VIOLET/BLACK
WHITE/BLUE
BLUE/BLACK