



## DISCONNECT THE BATTERY FIRST!

Once the Molex Connectors have been removed from your handlebar switch harness, simply match the colored wire with the mating terminal found on the extension harness. Be sure to cover the terminals with the 3" long heat shrink allowing 1/2" overlap on each side. Heat the shrink tubing in place on each terminal splice and allow the tubing to cool for a few minutes before reinstalling. When all connections have been made, cover the extension harness with the heat shrink provided.


### Connector Removal

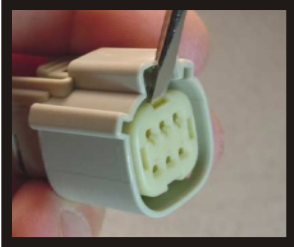

1. Place a small blade style screw-driver into designated pry point.

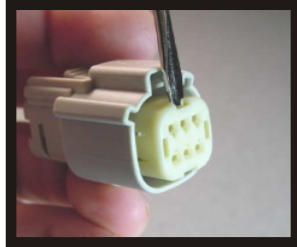


2. Pry outward on the screwdriver in order to release the TPA.

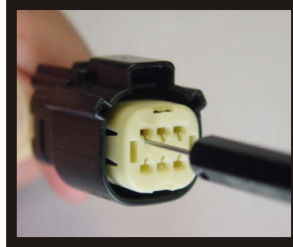


3. Once TPA slides forward, insert removal tool and push terminal while pulling wire to remove from connector housing.


### Connector Installation

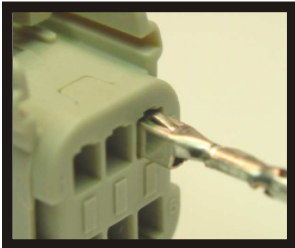

1. When re-installing terminals be sure to check for proper terminal alignment.

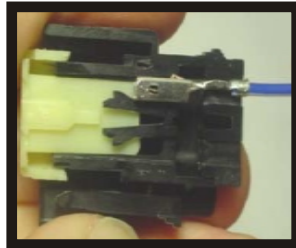

2. Once terminal goes into housing, push in until a click is heard.

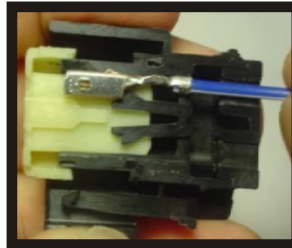

3. Now pull wire back to engage terminal with the connector. Push the TPA in order to lock all terminals in place.

2007 - Up

Left Side

ORANGE/WHITE  
YELLOW  
BLUE  
WHITE  
WHITE/VIOLET  
YELLOW/BLACK  
BLACK  
BLACK/RED

Right Side

BLACK/RED  
WHITE/BROWN  
WHITE/BLACK  
GRAY  
RED/YELLOW  
ORANGE/WHITE